



# DIGITAL 2900 SERIES/P-SERIES HOW TO CHANGE CODE

1. Using a #2 screwdriver, remove the four (4) Red Screws.
2. Carefully remove cover plate.  
**WARNING: Springs are attached to plate.**

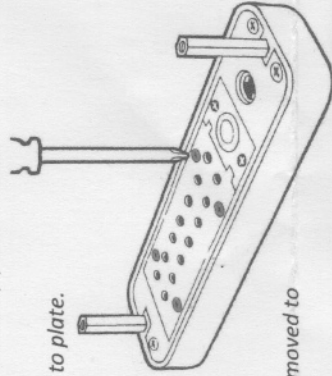

RED = CODE TUMBLERS  
 BLUE = NON-CODE TUMBLERS  
 'C' = CLEAR (DO NOT REMOVE)  
 'Y' = PASSAGE ('Y' Tumbler may be removed to  
 disable PASSAGE FUNCTION)

3. PRESS & HOLD 'C' BUTTON to release tumblers.  
**IMPORTANT: 'C' Button must be pressed and held down when removing and inserting tumblers. Failure to do so will damage the lock and void the warranty.**

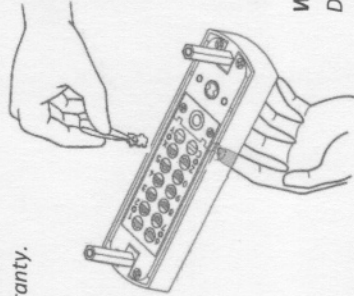


**WARNING:**  
 Do NOT force tumblers into position!

4. While holding the 'C' BUTTON, remove/add CODE (Red) and NON-CODE (Blue) Tumblers to create your desired code.  
 Ex: 3 Red = 3-Digit Code / 6 Red = 6-Digit Code

**IMPORTANT: Ensure notched side of tumbler fits into slot. (Below – Far Right).**

5. After changing your code, release the 'C' BUTTON to secure the tumblers in place.

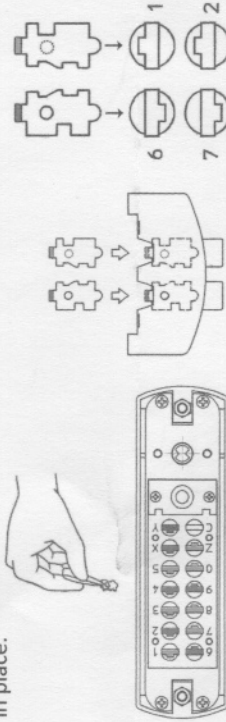

6. Replace the cover plate and secure with four (4) Red Screws, using a #2 screwdriver.
7. TEST CODE before installing/re-installing lock.

